


**AFTER MARKET LOCK INSTALLATION  
TYPICAL DOUBLE DOOR APPLICATION**



**HARDWARE:** Refer to parts bag for hardware quantities

<p>DOUBLE THROW LOCK HOUSING 274.201</p>	<p>LOCK CORE AND KEYS 518.666</p>	<p>LOCK STOP BRACKET 276.185</p>	<p>Z BRACKET 276.188</p>
<p>#6 x 1" FLAT HEAD SCREW 258.150 (USE FOR LOCK HOUSING)</p>	<p>6# x 3/4" FLAT HEAD SCREWS 258.145 (USED FOR BRACKETS)</p>		

**SINGLE DOOR  
WITH RIGHT OR LEFT HINGE  
- PAGE 2**

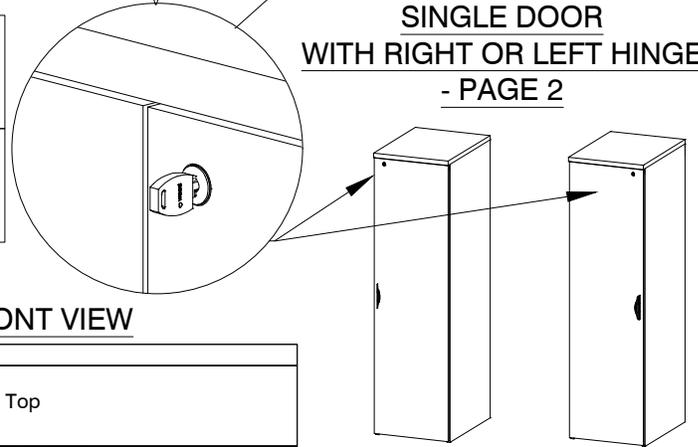


**FRONT VIEW**

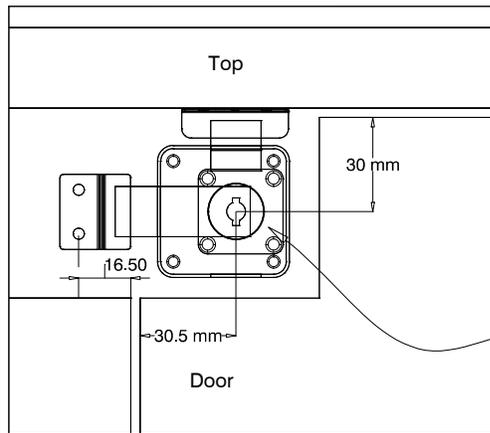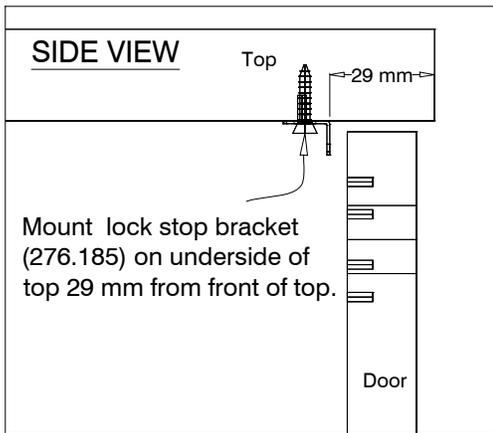


QUESTIONS OR CONCERNS ?  
PHONE Customer Service  
1-800-567-3060  
1-250-765-4145  
M-F 6am - 4:30 pm PST

**USE Ø 3/4" DRILL BIT  
FOR LOCK CORE  
SEE PAGE 3 FOR  
POSITIONING TEMPLATE**

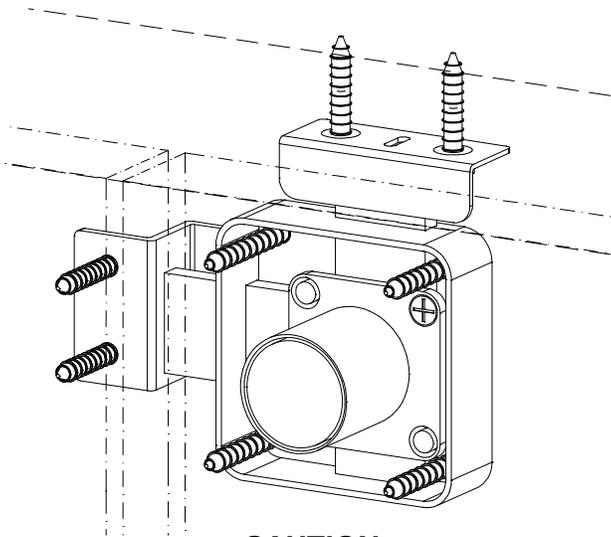

Double throw lock must be in unlocked position to install core.

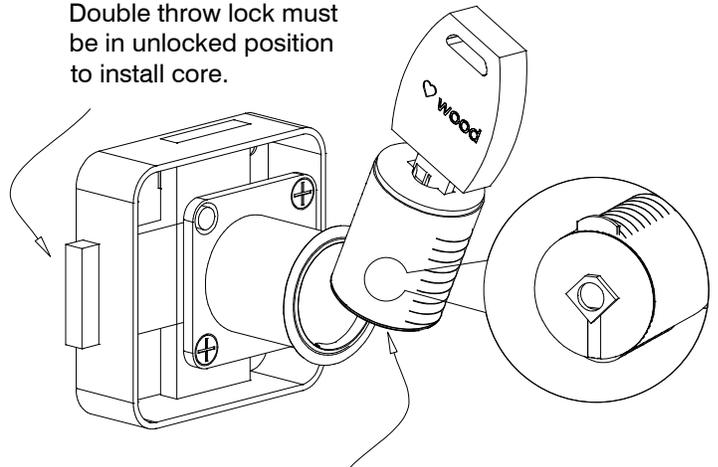

Install with key inserted in core. Align the two diamond shapes on both the bottom of the core and inside the lock housing. Tilt core at an angle and slide into housing until core **snaps** in place.

**CAUTION:**

**OFFICE FURNITURE IS HEAVY. ENSURE THAT YOU HAVE ADEQUATE ASSISTANCE WHEN LIFTING AND MOVING PARTS AND ASSEMBLIES. KEEP HARDWARE OUT OF REACH OF CHILDREN**


\*RED REMOVAL KEY



\*The core can be removed with the red removal key. The lock must be in the unlocked position to remove the core.

# AFTER MARKET LOCK INSTALLATION


## TYPICAL SINGLE DOOR APPLICATION

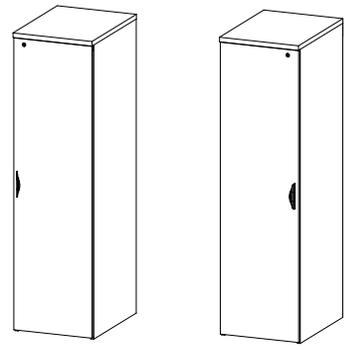

<p>DOUBLE THROW LOCK HOUSING 274.201</p> 	<p>LOCK CORE AND KEYS 518.666</p> 	<p>LOCK STOP BRACKET 276.185</p> 
<p>#6 x 1" FLAT HEAD SCREW 258.150 (USE FOR LOCK HOUSING)</p> 	<p>6# x 3/4" FLAT HEAD SCREWS 258.145 (USED FOR BRACKETS)</p> 	


### RIGHT HINGE DOOR LOCK INSTALLATION

#### SIDE VIEW

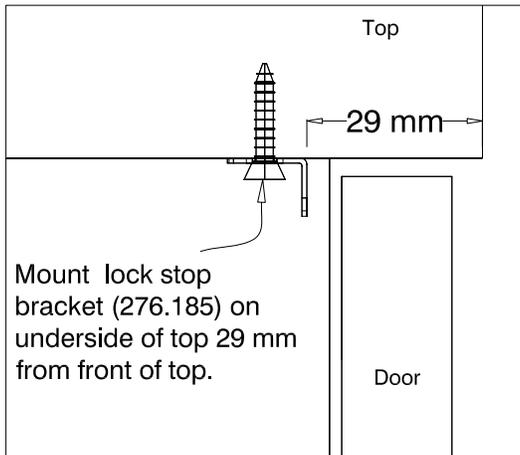


### LEFT HINGE DOOR LOCK INSTALLATION


#### SIDE VIEW

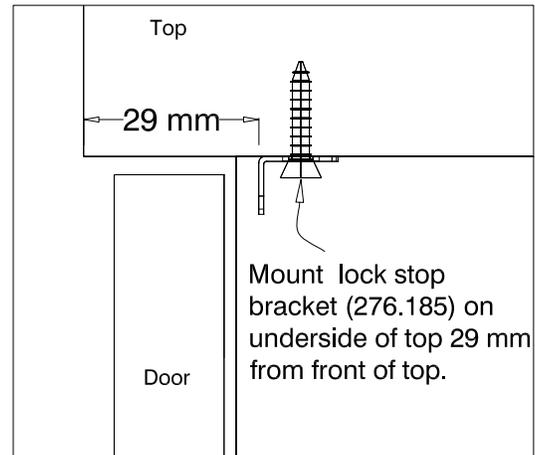

#### FRONT VIEW

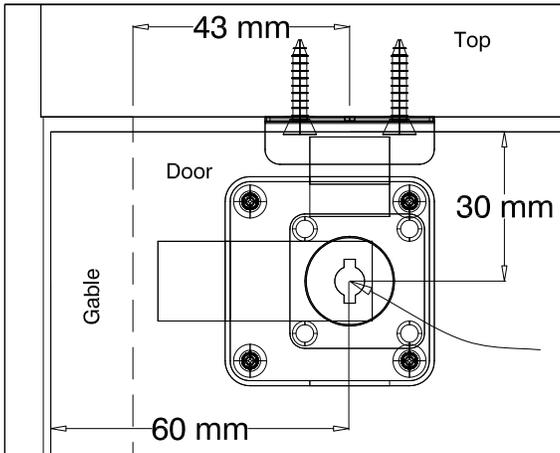

#### FRONT VIEW

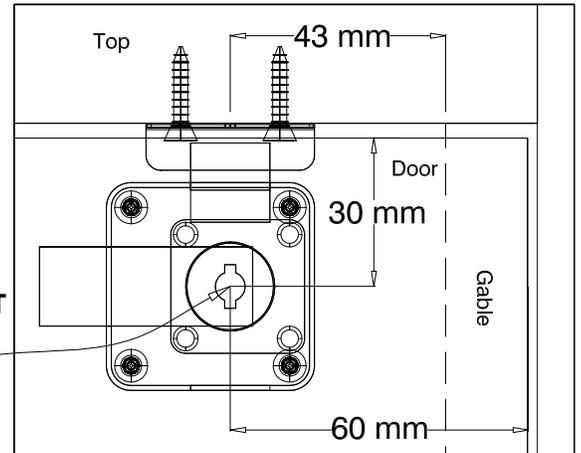

USE  $\varnothing 3/4"$  DRILL BIT FOR LOCK CORE  
SEE PAGE 3 FOR POSITIONING TEMPLATE


Double throw lock must be in unlocked position to install core.

\*RED REMOVAL KEY



### QUESTIONS OR CONCERNS ?

PHONE Customer Service  
1-800-567-3060  
1-250-765-4145  
M-F 6am - 4:30 pm PST

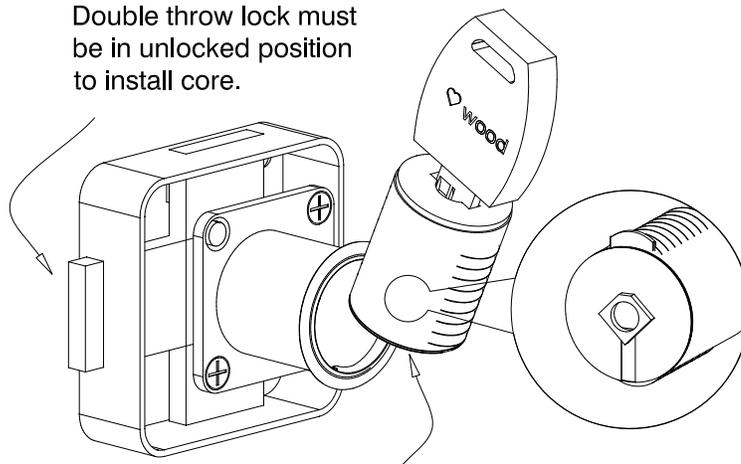


\*The core can be removed with the red removal key. The lock must be in the unlocked position to remove the core.




Install with key inserted in core. Align the two diamond shapes on both the bottom of the core and inside the lock housing. Tilt core at an angle and slide into housing until core **snaps** in place.

# POSITIONING TEMPLATE FOR LOCK INSTALLATION

## DOUBLE DOOR TEMPLATE

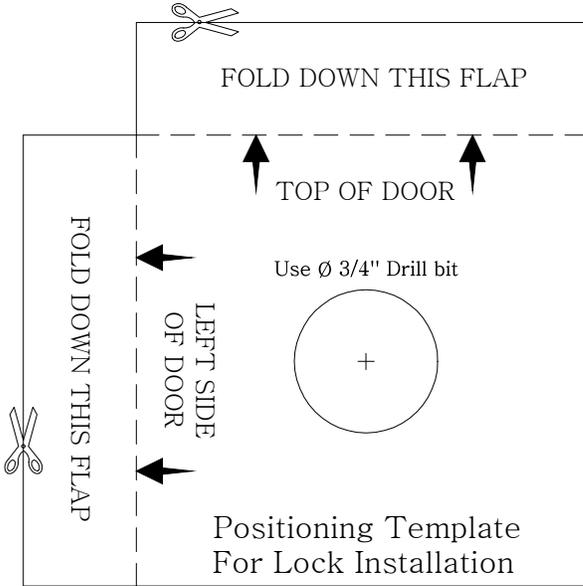

## SINGLE DOOR TEMPLATE

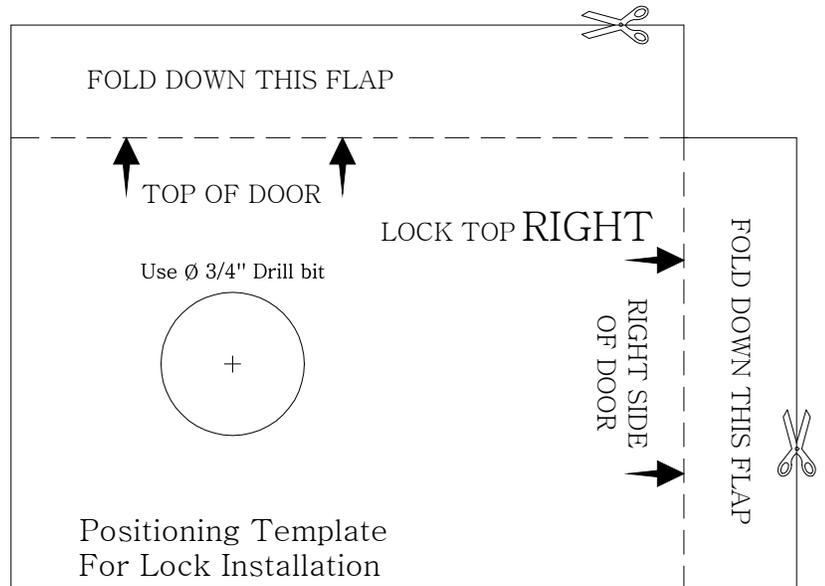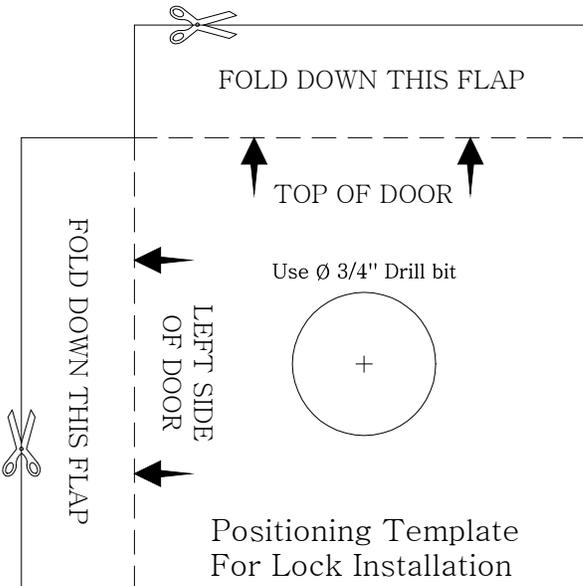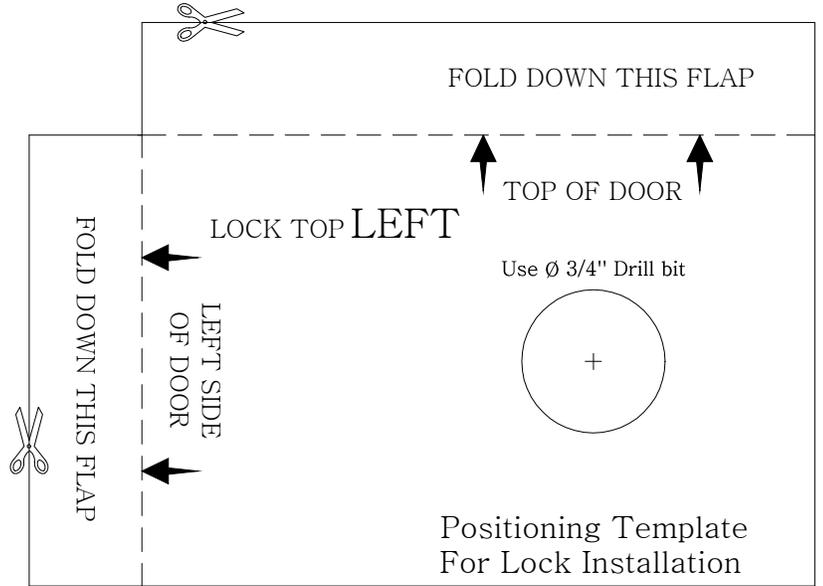

QUESTIONS OR CONCERNS ?

PHONE Customer Service

1-800-567-3060

1-250-765-4145

M-F 6am - 4:30 pm PST