


framework

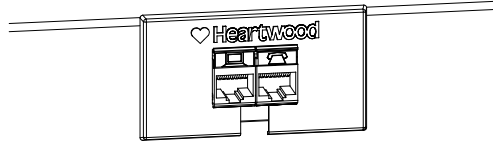

## ASSEMBLY INSTRUCTION:

Cat 6 Jack Installation

### MODEL:


FRM-C6JK-BL

#### CAT JACK



2 PC

#### RACEWAY GROMMET




1 PC


#### CAUTION:

OFFICE FURNITURE IS HEAVY. ENSURE THAT YOU HAVE ADEQUATE ASSISTANCE WHEN LIFTING AND MOVING PARTS AND ASSEMBLIES. KEEP HARDWARE OUT OF REACH OF CHILDREN


1. Remove the raceway cover from the raceway.

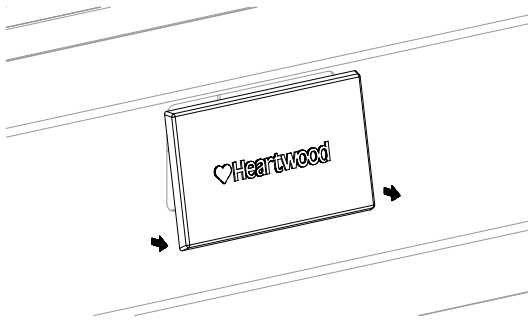


2. Insert cat jacks into the rear of the raceway grommet positioning the bottom groove on the edge of grommet opening.

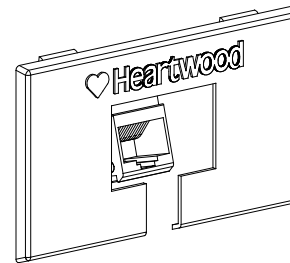


3. Press down on the top of the cat jack and twist the top into place.

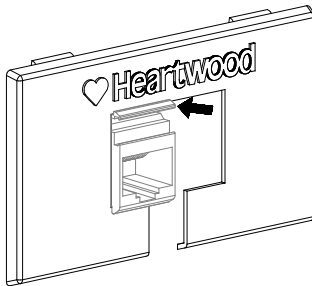

4. Decide which cat jack indicator to use and slide indicators into place locking the cat jack's position.

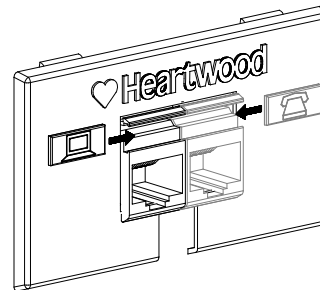

5. Hook the top raceway grommet tabs onto the raceway edge, push raceway grommet up and in to position on the raceway cover.

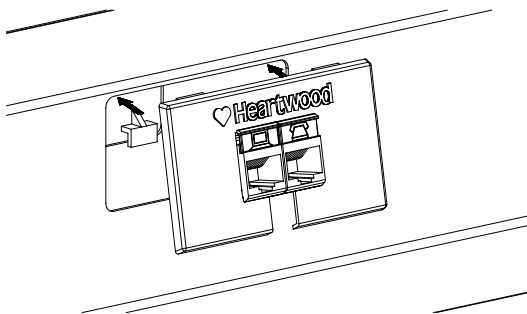

## WARNING

IT IS THE INSTALLERS RESPONSIBILITY TO ENSURE NETWORK AND PHONE CABLES ARE PROPERLY CONNECTED. HDL DOES NOT TAKE RESPONSIBILITY FOR IMPROPERLY WIRED CAT6 JACKS.